



Heated Towel Rails

Installation Guide

Experience, *the difference.*


LINSOL.COM.AU

Hard Wired (Hidden Wiring)




Electrician Only

Cable Connection

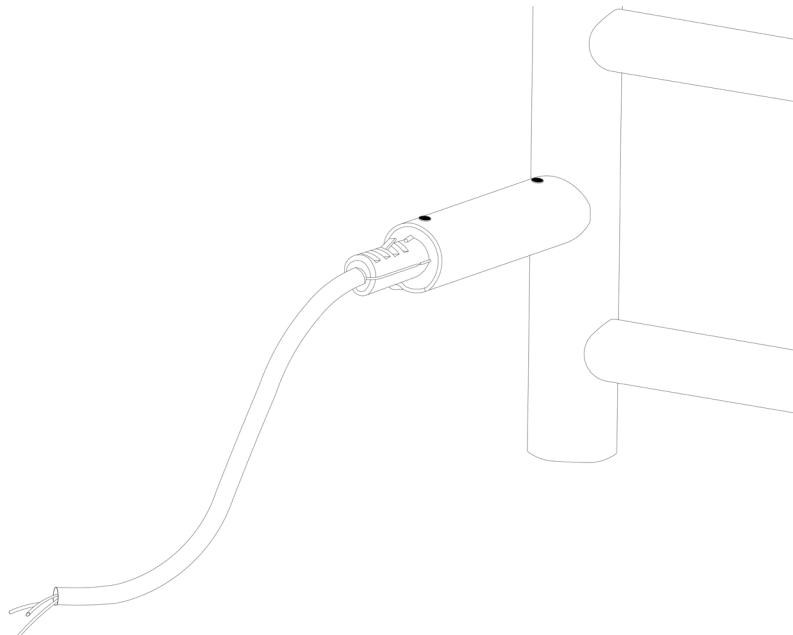

Product Assembled

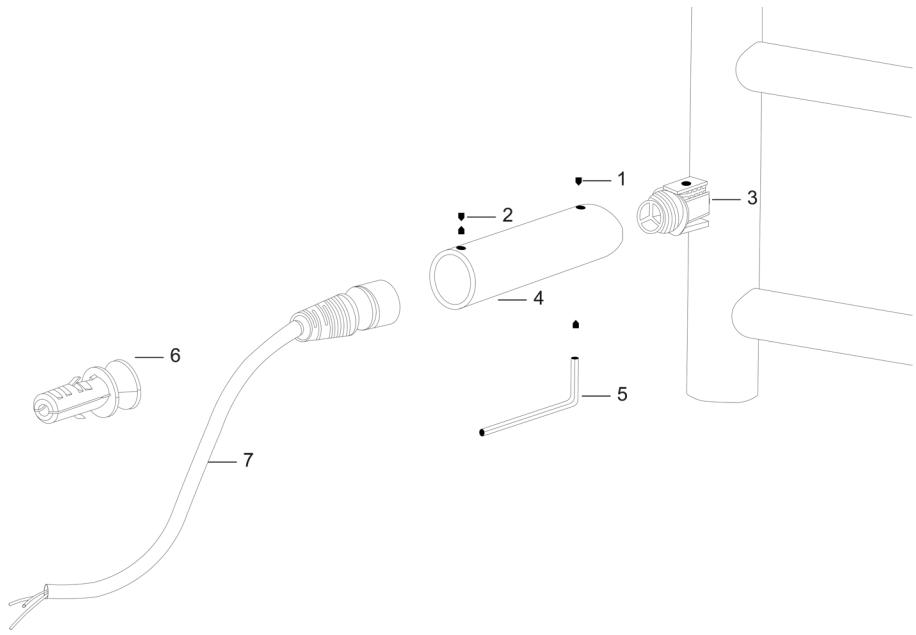

Product Parts

1.	2 x M5*4 Mounting screws	5.	M2.5 Allen Key
2.	M5*6 Mounting screw	6.	Plastic push plug
3.	Rail screw connector	7.	Cable connection (Cut end off plug)
4.	Leg for exposed wiring		

Experience, the difference.


Hard Wired (Hidden Wiring)



Electrician Only


Step 1.

- Mount 3 x legs using M*16

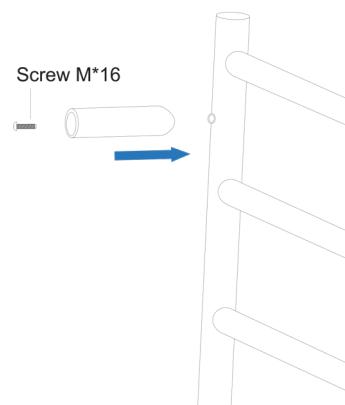


Step 2.

- Feed the cable through centre hole of the plastic push plug
- Screw the cable connection onto the rail screw connector
- Mount the plastic push plug on leg
- Screw M5*6 on underside of leg

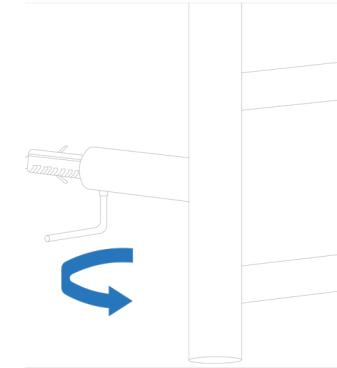


Step 3.

- Mark mounting holes according to dimensions
- Drill 3 x holes to match plastic expanders
- Insert plastic expanders
- Screw 3x fix bases
- Drill 1x 14mm hole to fit the plastic push plug

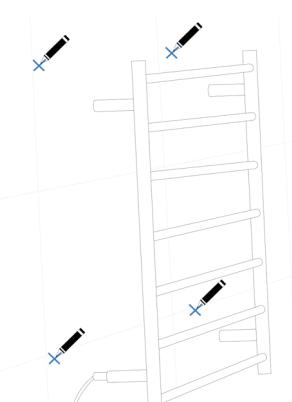

Step 4.

- Feed the wired cable through 1x 14mm hole in wall
- Mount the assembled towel rail by placing 3x legs onto fix bases and pushing the plastic push plug through 14mm hole with wire
- Screw 3x M5*6 on legs for 3x fix bases

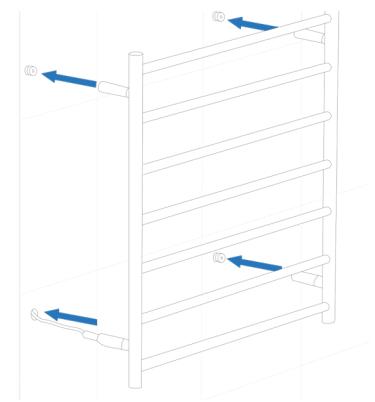


Experience, the difference.

Plug In (Exposed Wiring)




DIY

Cable Connection

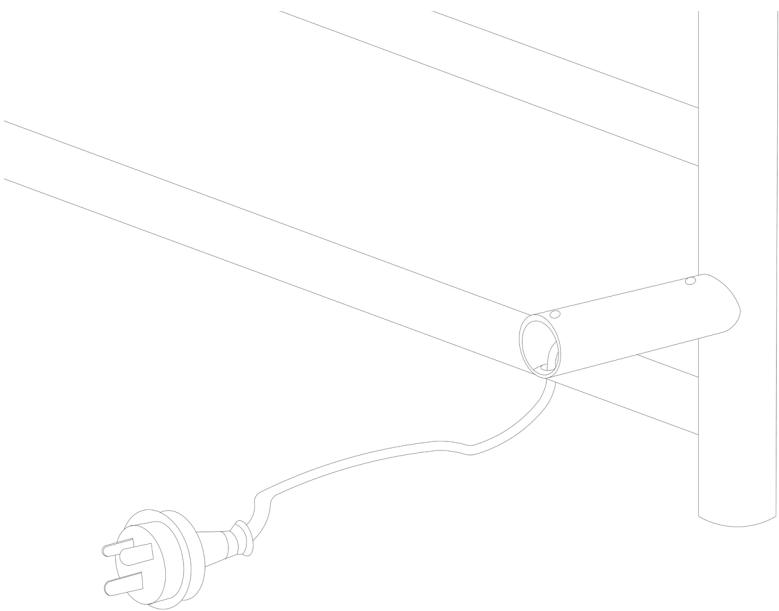

Product Assembled

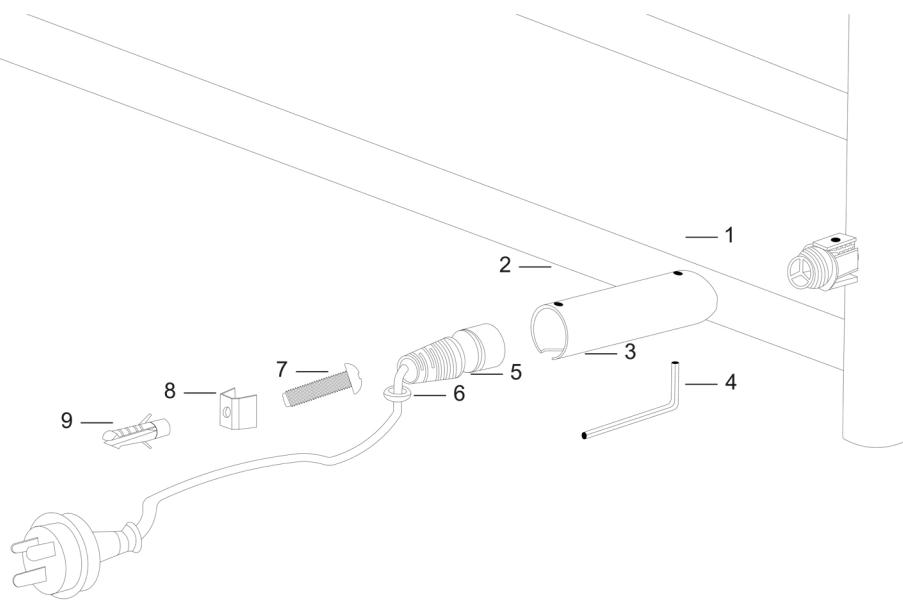

Product Parts

1.	2 x M5*4 Mounting screws	6.	Rubber grommet
2.	M5*6 Mounting screw	7.	M5*45 Screw nail
3.	Leg for exposed wiring	8.	Special fix base
4.	M2.5 Allen Key	9.	Plastic expander
5.	Cable connection		

Experience, the difference.


Plug In (Exposed Wiring)



DIY


Step 1.

- Mount 4 x legs using M*16

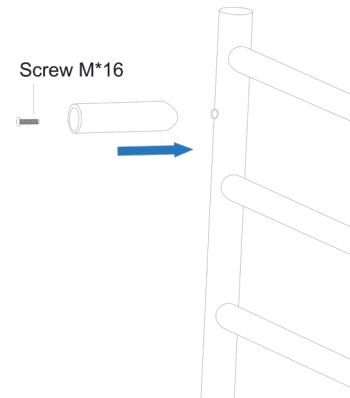


Step 2.

- Mark mounting holes according to dimensions
- Drill 4 x holes to match plastic expanders
- Insert plastic expanders in wall

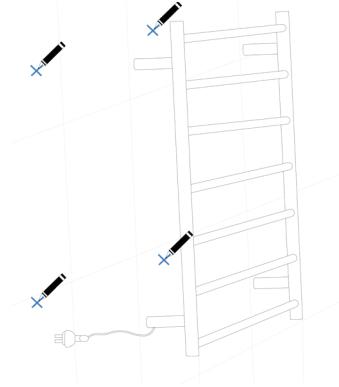


Step 3.

- Mount 3 x fix base and 1 x special fix base

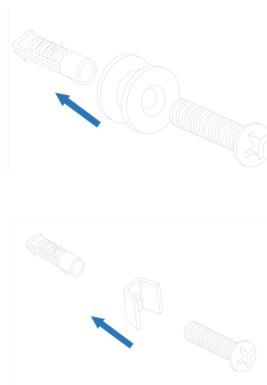


Step 4.

- Mount assembled rail onto 3 x fix bases and 1 x special fix base

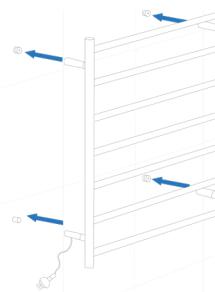

Step 5.

- Screw M5*6 on underside of legs and tighten

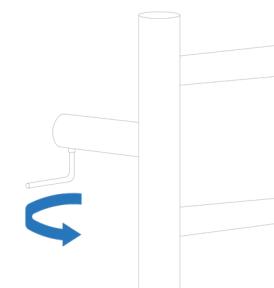

Experience, the difference.



Experience, the difference.